Thinking of you

Electrolux

user manual

Oven

EOB64201

Electrolux. Thinking of you.
Share more of our thinking at www.electrolux.com

Contents

Operating Instructions 3
Safety instructions 3
Description of the Appliance 4
Before Using for the first time 7
Using the Oven 8
Uses, Tables and Tips 18
Cleaning and Care 28
What to do if … 34
Service 35

CE

Subject to change without notice

The following symbols are used in this user manual:

Important information concerning your personal safety and information on how to avoid damaging the appliance.

General information and tips

Environmental information

Operating Instructions

⚠ Safety instructions

Electrical safety

- This appliance must be only connected by a **registered electrician**.
- In the event of a fault or damage to the appliance: Take the fuses out or switch off.
- **Repairs** to the appliance must only be carried out by **qualified service engineers**. Considerable danger may result from improper repairs. If repairs become necessary, please contact our Customer Services or your dealer.

Child Safety

- Never leave children unsupervised when the appliance is in use.

Safety whilst using

- People (including children) who, because of their physical, sensory or mental capabilities or their inexperience or ignorance are not able to use the device safely, should not use this device without supervision or instruction by a responsible person.
- This appliance is intended to be used for cooking, roasting and baking food in the home.
- Take care when connecting electric appliances to sockets nearby. Do **not** allow connecting leads to come into contact with or to catch beneath the hot oven door.
- **Warning: Risk of burns!** The interior of the oven becomes hot during use.
- Using ingredients containing alcohol in the oven may create an alcohol-air mixture that is easily ignited. In this case, open the door carefully. Do not have embers, sparks or naked flames in the vicinity when opening the door.

Information on acrylamides

According to the latest scientific knowledge, intensive browning of food, especially in products containing starch, can constitute a health risk due to acrylamides. Therefore we recommend cooking at the lowest possible temperatures and not browning foods too much.

How to avoid damage to the appliance

- Do not line the oven with aluminium foil and do not place baking trays, pots, etc. on the oven floor, as the heat that builds up will damage the oven enamel.
- Fruit juices dripping from the baking tray will leave stains, which you will not be able to remove. For very moist cakes, use a deep tray.
- Do not put any strain on the oven door when open.
- Never pour water directly into the oven when it is hot. This could cause damage to or discolouration of the enamel.
- Rough handling, especially around the edges of the front panel, can cause the glass to break.
- Do not store any flammable materials inside the oven. These could ignite when the oven is switched on.
- Do not store any moist foods inside the oven. This could damage the oven enamel.
- After switching off the cooling fan, do not keep uncovered dishes in the oven. Moisture may condense in the oven interior or on the glass doors and may get into the units.

Note on enamel coating

Changes in the colour of the oven's enamel coating as a result of use do not affect the appliance's suitability for normal and correct use. They therefore do not constitute a defect in the sense of the warranty law.

Description of the Appliance

General Overview

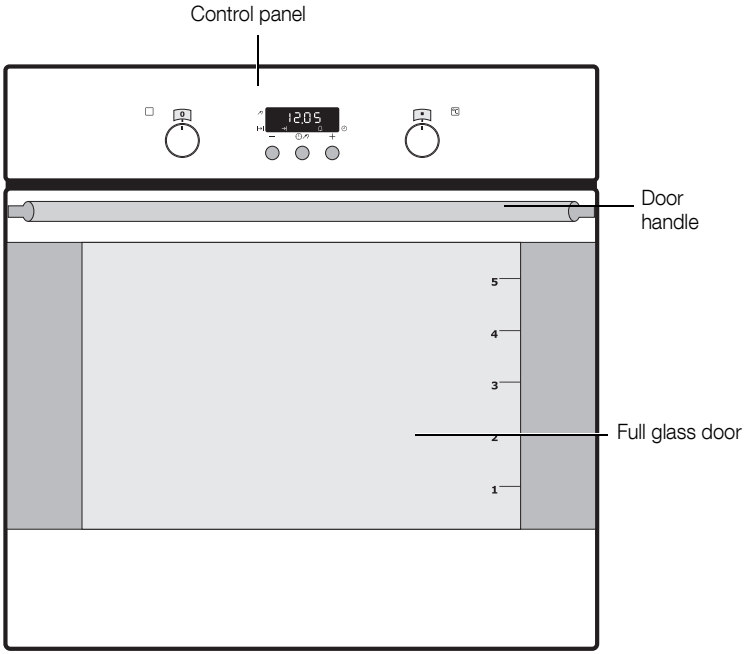

Control Panel

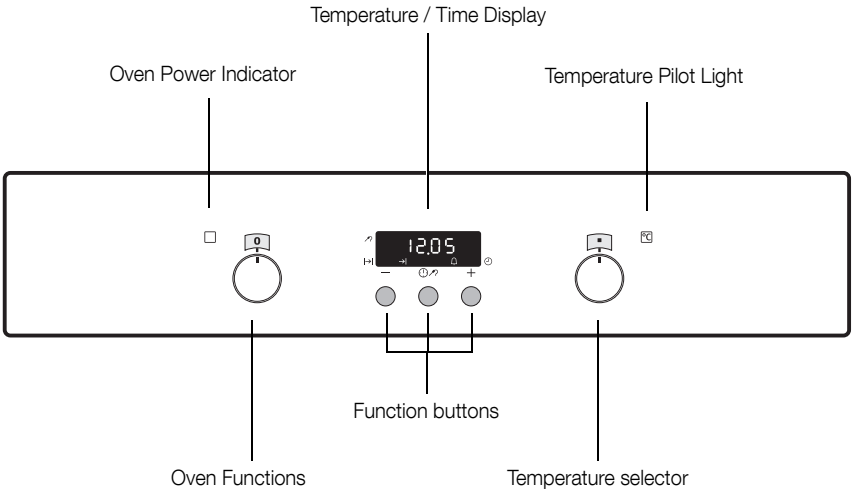

Oven Features

All interior oven walls, except the floor of the oven, are coated with a special enamel (catalytic coating).

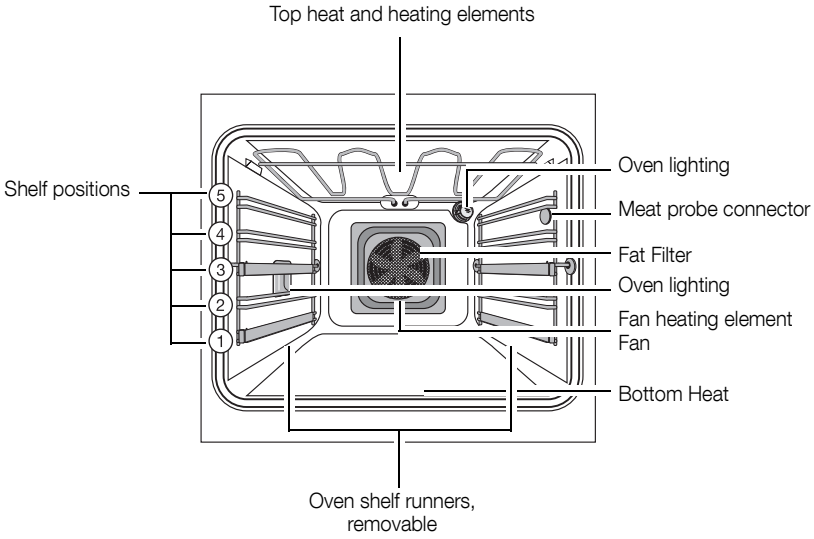

Inside of door

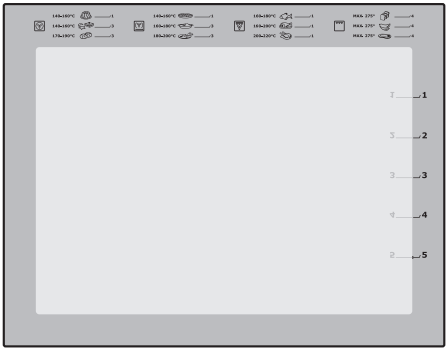

On the inside of the oven door you will find the numbers of the different oven shelves.

You will also find some brief information about the oven's functions, recommended shelves and temperatures for cooking the most popular dishes.

Oven accessories

Oven shelf

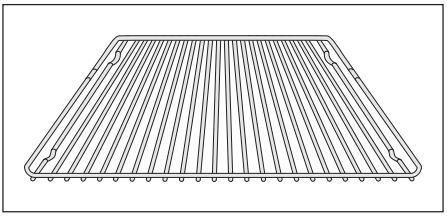

For cookware, cake tins, roasts and grilled foods.

Baking tray

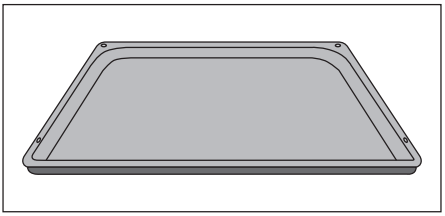

For cakes and biscuits.

Roasting Pan

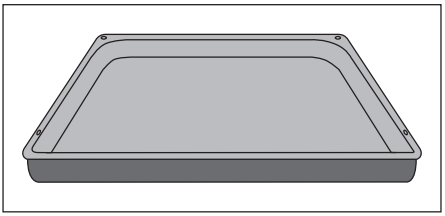

For baking and roasting or as a pan for collecting fat.

Meat probe

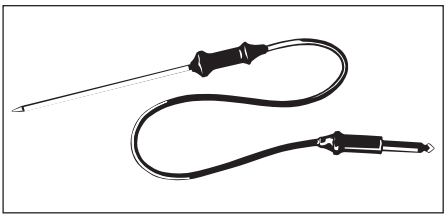

For determining exactly how far joints of meat are cooked.

Before Using for the first time

Setting and changing the time

The oven only operates when the time has been set.

After the appliance has been connected to the electrical supply or when there has been a power cut, the function indicator Time flashes automatically.

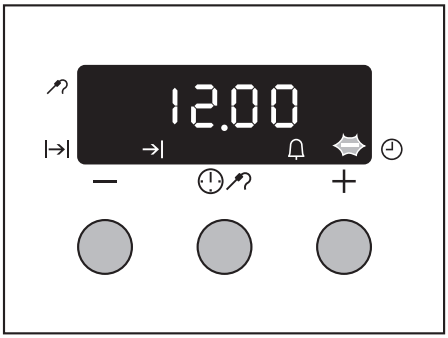

1. To change a time of day that has already been set, press the Selection button repeatedly until the function indicator Time flashes.
2. Using the + or − button, set the current time.

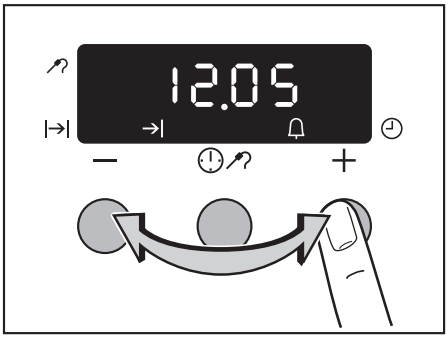

After about 5 seconds, the flashing stops and the clock displays the time of day set.

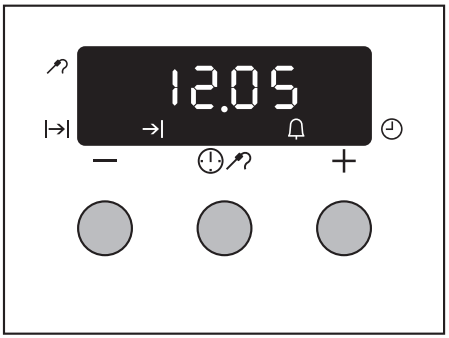

The appliance is now ready to use.

The Time can only be changed, if no automatic function (Cook time or End time) is set.

Initial Cleaning

You should clean the oven before using it for the first time.

Caution: Do not use any caustic, abrasive cleaners! The surface could be damaged.

To clean the external parts of the oven, only use a cloth well wrung out with warm water to which a little washing up liquid has been added or a commercially available cleaner specifically designed for this purpose.

To prevent damaging the door or door glass, avoid the use of the following:

- Household detergent and bleaches
- Impregnated pads unsuitable for non-stick saucepans
- Brillo/Ajax pads or steel wool pads
- Chemical oven pads or aerosols
- Rust removers
- Bath/Sink stain removers

1. Turn the oven function switch to oven lighting.
2. Remove all accessories and the shelf support rails and wash them with warm water and washing up liquid.
3. Wash the floor of the oven in the same way using warm soapy water, and allow to dry.
4. Wipe the front of the appliance with a damp cloth.

Using the Oven

The oven is equipped with **retractable buttons** for “Oven functions” and “Temperature selection”. To use, press the relevant button. The button then sticks out.

Switching the Oven On and Off

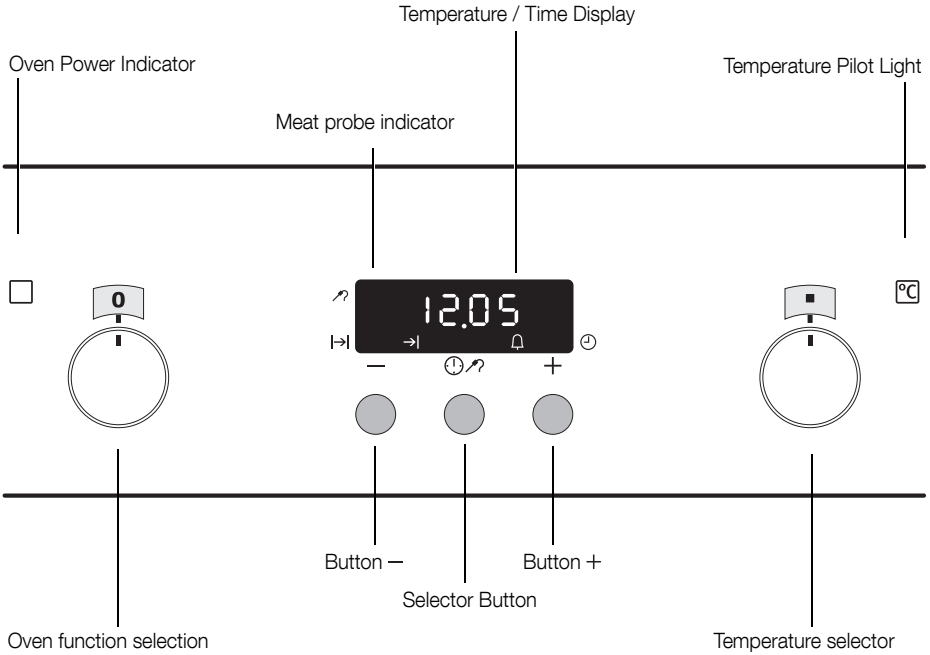

1. Turn the oven functions dial to the desired function.
2. Turn the temperature selector to the desired temperature.

The power indicator is lit as long as the oven is in operation.

The temperature pilot light is lit as long as the oven is heating up.

3. To turn the oven off, turn the oven functions dial and the temperature selector to the Off position.

Cooling fan

The fan switches on automatically in order to keep the appliance’s surfaces cool. When the oven is switched off, the fan continues to run to cool the appliance down, then switches itself off automatically.

Oven Functions

The oven has the following functions:

	Oven function	Application
	Light	Using this function you can **light up** the oven interior, e.g. for cleaning.
	Convection with ring heating element	For **baking** on **up to three oven levels** at the same time. Set the oven temperatures 20-40 °C lower than when using Conventional.
	Pizza setting	For baking on one oven level dishes that require **more intensive browning and a crispy base**. Set the oven temperatures 20-40 °C lower than when using Conventional.
	Conventional	For **baking** and **roasting** on **one oven level**.
	Bottom heat	For **baking** cakes with **crispy or crusty bases**.
	Defrost	For **defrosting** e. g. flans and gateaux, butter, bread, fruit or other **frozen foods**.
	Grill	For **grilling** flat food items placed in the **middle of the grill** and for **toasting**.
	Dual grill	For **grilling** flat food items in **large quantities** and for **toasting**.
	Convection grilling	For **roasting** larger joints of meat or poultry on one level. The function is also suitable for **gratinating** and **browning**.

Inserting the Combination Shelf, Baking Tray and Roasting Pan

Inserting the baking tray or roasting pan

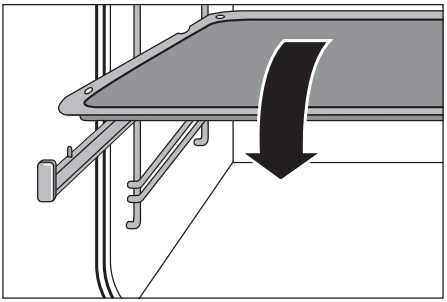

Insert baking tray or or roasting pan on the telescopic runners of the selected oven level so that the two holes engage on the front retaining pins on the telescopic runners.

Inserting the oven shelf:

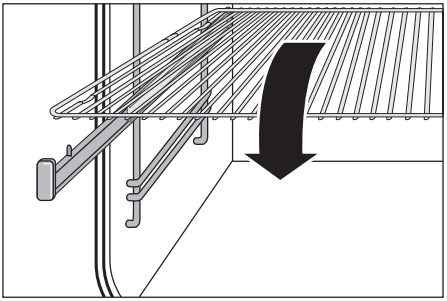

Insert the oven shelf so that the feet point downwards.

Insert the oven shelf on the telescopic runners of the selected oven level.

The high rim around the oven shelf is an additional device to prevent cookware from slipping.

Inserting the oven shelf and roasting pan together:

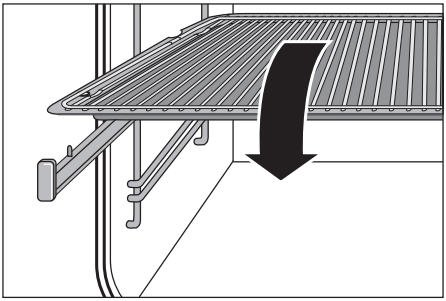

Lay the oven shelf on the roasting pan.
Insert the oven shelf and the roasting pan on the telescopic runners of the selected oven level so that the two holes of the roasting pan engage on the front retaining pins on the telescopic runners.

To make it easier to insert the insertable component when runners are extended to different extents, lay the insertable component onto the runners at the back, push it in as far as the stop and then lower it onto the retaining pins at the front.

Inserting/Removing the Fat Filter

Only use the fat filter when roasting to protect the rear heating elements from fat splashes.

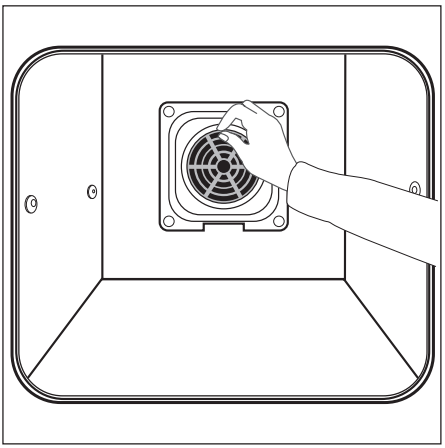

Inserting the fat filter

Hold the fat filter by the grip and insert the two mounts downwards into the opening on the rear wall of the oven (fan opening).

Taking out the fat filter

Hold the fat filter by the grip and unhook it.

Meat probe

For switching off the oven when the temperature at the centre of a roast reaches a set temperature.

Important!: Only the meat probe supplied may be used. If replacing, please use only original replacement parts.

1. Push the tip of the meat probe right into the meat so that the tip is in the centre of the meat.

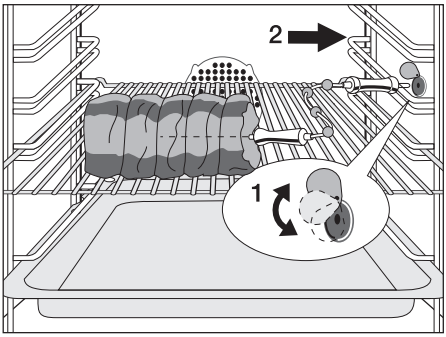

2. Insert the meat probe plug into the socket on the side wall of the oven as far as it will go.
3. Using the + or − button set the desired core temperature.

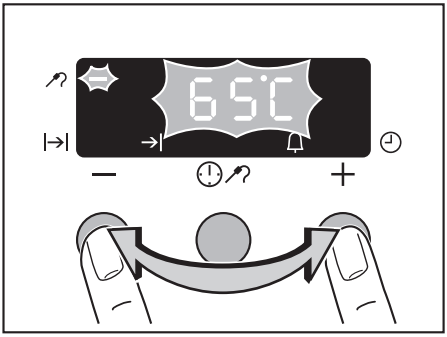

The display changes to the current core temperature.

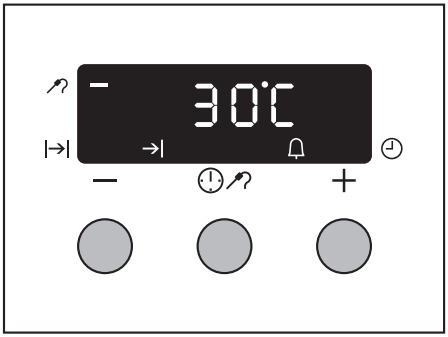

The core temperature is displayed from 30°C.

4. Set oven function and oven temperature.

As soon as the core temperature set is reached, an audible signal sounds and the oven switches itself off automatically.

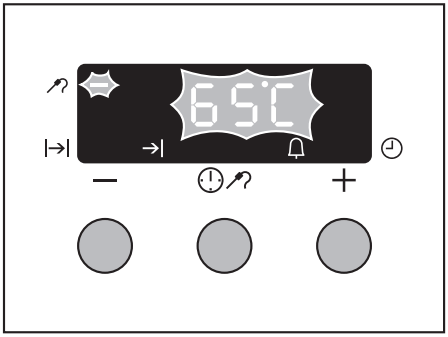

5. Press any key to switch off the signal.
6. Turn oven function selector and temperature selector to the Off position.

Warning: The meat probe is hot! There is a risk of being burned when removing the plug and the tip of the meat probe.

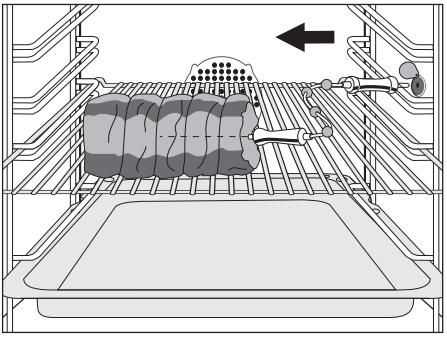

7. Remove the meat probe's plug from the socket and take the meat out of the oven.

Changing the core temperature

– Press the Selection button.
– If necessary, change the temperature using + or −.

Clock Functions

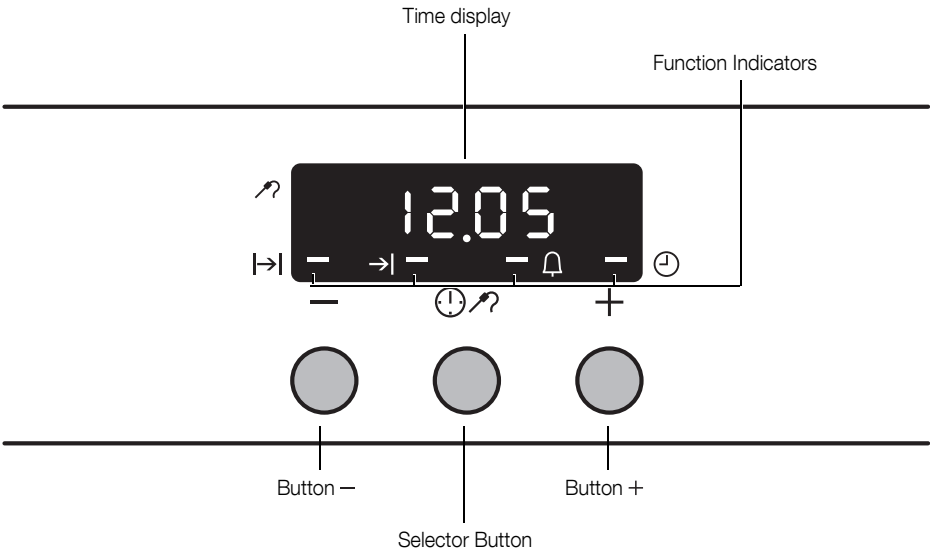

Cook time |→|
To set how long the oven is to be in use.

End time →|
To set when the oven is to switch off again.

Countdown 🔔
To set a countdown. A signal sounds after the time has elapsed.
This function does not affect the functioning of the oven.

Time 🕘
To set, change or check the time
(See also section “Before Using for the First Time”).

Switching off the time display
You can save energy by switching off the time display.

To switch off the time display
Press the + button and the — button at the same time until the display goes out.

To switch on the time display
Press any button until the time appears in the display again.

The display can only be switched off if no clock function or core temperature is entered.

General Hints

- After a function has been selected, the display flashes for about 5 seconds. While it flashes, the desired time can be set using the + or — buttons.
- When the desired time has been set, the display flashes for another 5 seconds. The set time begins to run.
- Press any of the buttons to stop the signal.
- The desired oven function and temperature can be selected before or after setting the clock functions.
- When cooking is finished, turn the oven and temperature selectors back to zero.

Countdown

1. Press the Selection button repeatedly until the function indicator Countdown flashes.

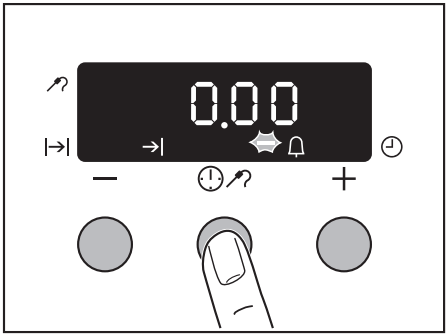

2. Within 5 seconds set the desired countdown using the + or − buttons (max. 2 hours 30 minutes).

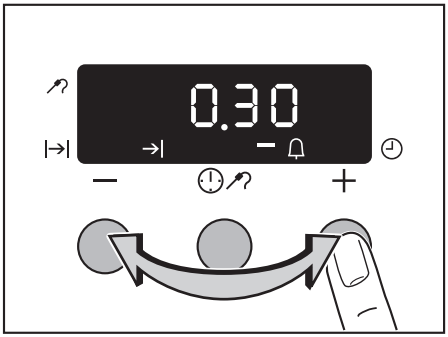

The function indicator Countdown lights up.
After 5 seconds the display shows the current time.

When the time set has elapsed, “00.00” and the function indicator flashes. An audible signal sounds.

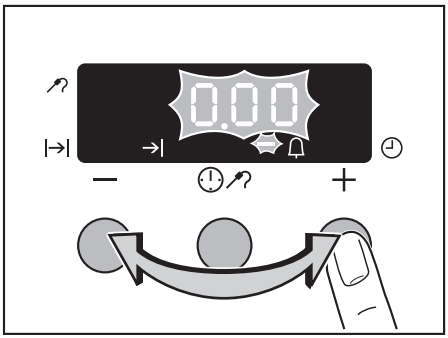

3. The signal can be stopped by pressing any button.

Cook time

1. Press the Selection button repeatedly until the function indicator Cook time flashes.

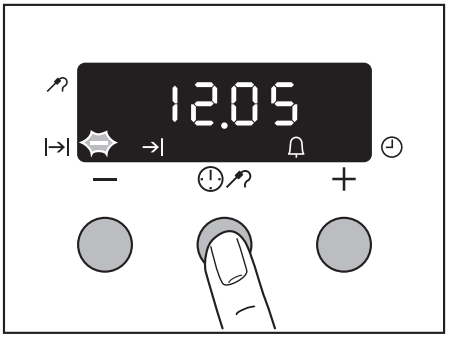

2. Using the + or − button set the desired cooking time.

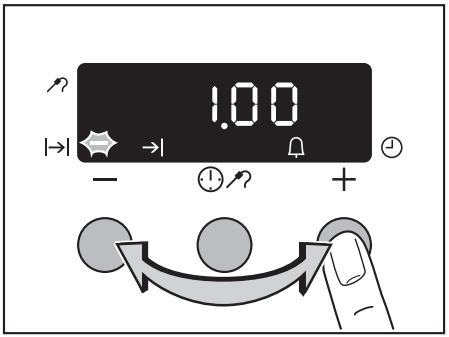

After approx. 5 seconds the display returns to showing the current time. The function indicator Cook time lights up.

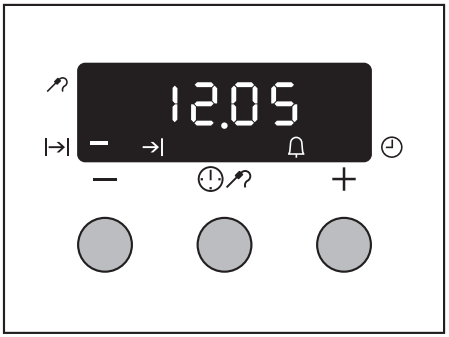

When the time has elapsed, the function indicator flashes, an audible signal sounds for 2 minutes and the oven switches itself off.

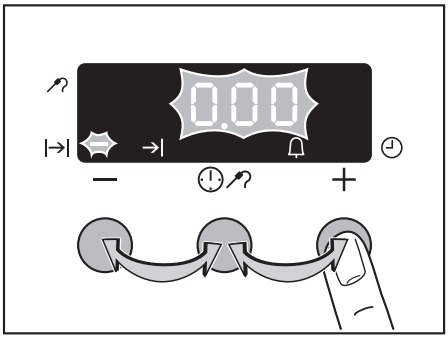

3. The signal and the programme can be stopped by pressing any button.

End time →|

1. Press the Selection button repeatedly until the function indicator End time →| flashes.

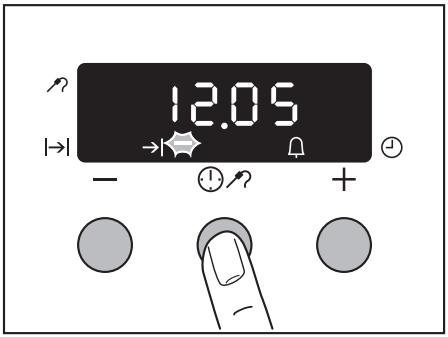

2. Using the + or − button set the desired switch-off time.

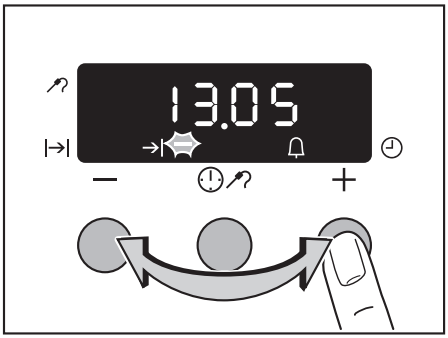

After approx. 5 seconds the display returns to showing the current time.

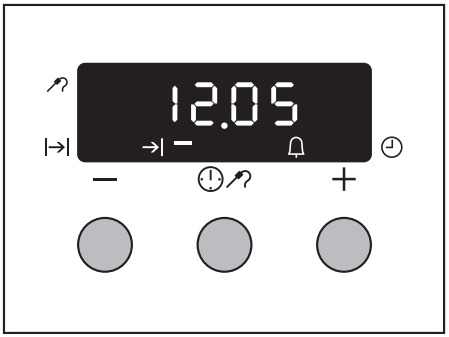

The function indicator End time →| lights up. When the time has elapsed, the function indicator flashes, an audible signal sounds for 2 minutes and the oven switches itself off.

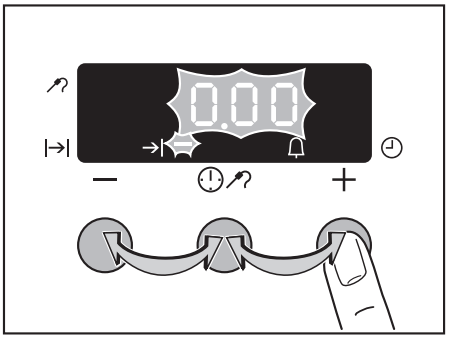

3. The signal and the programme can be stopped by pressing any button.

Cook time |→| and End time →| combined

Cook time |→| and End time →| can be used simultaneously, if the oven is to be switched on and off automatically **at a later time**.

1. Using the Cook time |→| function, set the time required for cooking the dish, 1 hour here.

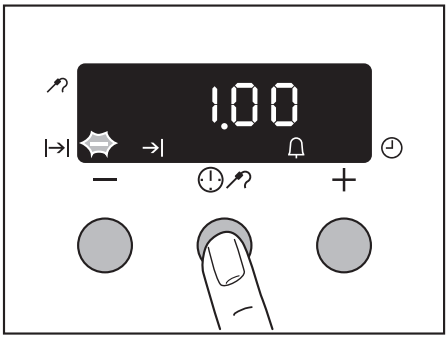

2. Using the End time →| function, set the time at which the dish is to be ready, 14:05 here.

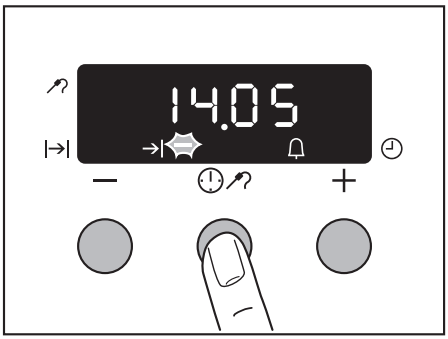

The function indicators Cook time |→| and End time →| light up and the current time is shown in the display, 12:05 here.

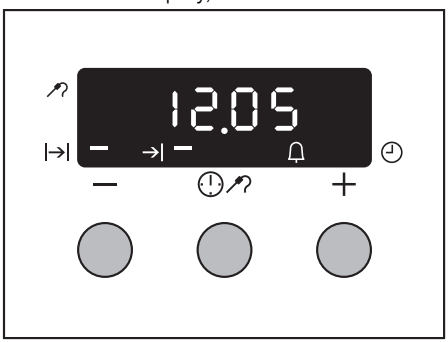

The oven switches on automatically at the time calculated, at 13:05 here.
And switches itself off again when the cook time entered has elapsed, at 14:05 here.

Mechanical door lock

When the appliance is delivered the door lock is deactivated.

Activating door lock

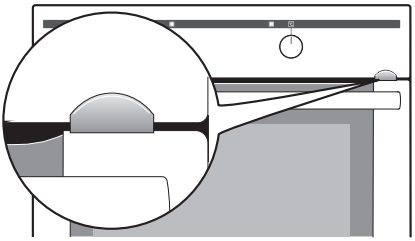

1. Take hold of the door trim (B) on the upper edge of the door at both sides and press inwards to release the clip seal. Then remove the door trim by pulling it upwards.

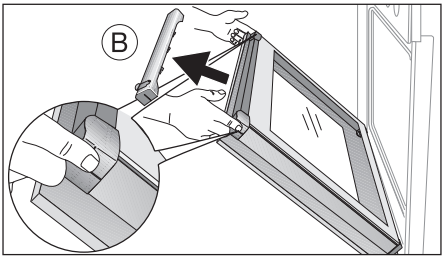

2. Activate lever:
Remove lever (1) and move 4mm to the left (2) and insert (3).

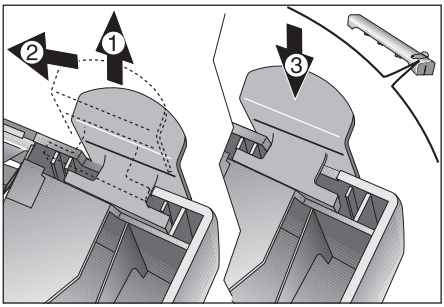

3. Take hold of the door trim (B) at each side, position it on the inside edge of the door and plug the door trim (B) into the upper edge of the door

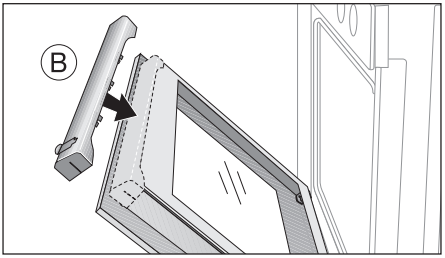

On the open side of the door trim (B) there is a guide bar (C). This must be pushed **between** the outer door panel and the guide corner (D).

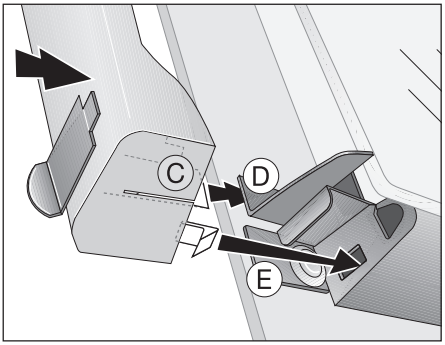

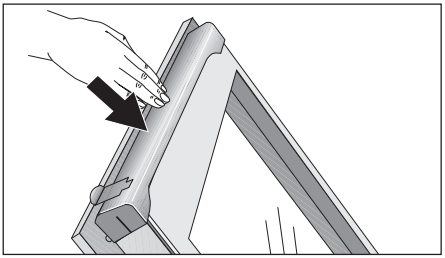

The clip seal (E) must be snapped in.

To open the oven door.

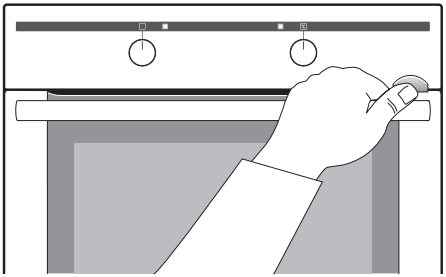

1. Keep lever pressed.
2. Open the door.

To close the oven

Close door without pressing the lever.

Deactivating door lock

To deactivate the door lock, the lever is moved to the right again. Proceed as described above.

Switching off the appliance does not remove the mechanical door lock.

Removing door lock

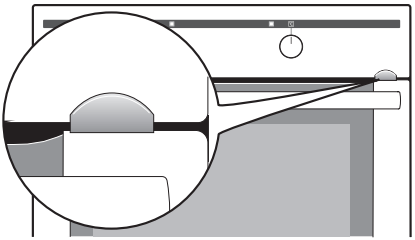

1. Take hold of the door trim(B) on the upper edge of the door at both sides and press inwards to release the clip seal. Then remove the door trim by pulling it upwards.

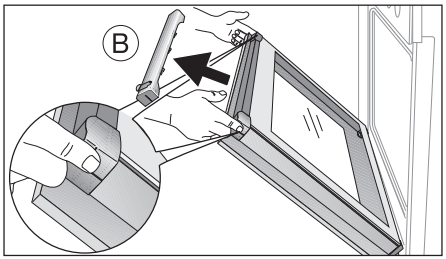

2. Demount lever:
   Remove lever (1).

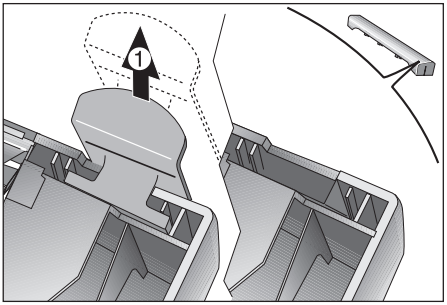

3. Remove trim from the under side of the door trim (B)(2) and push in (3).

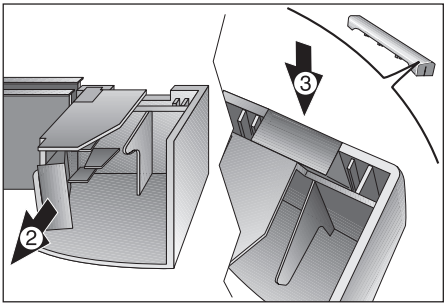

4. Take hold of the door trim(B) at each side, position it on the inside edge of the door and push the door trim (B) onto the upper edge of the door

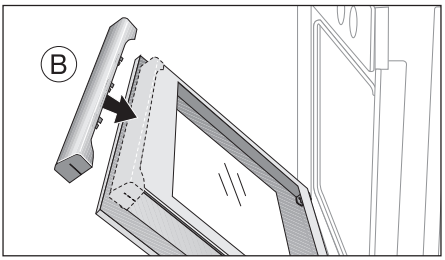

On the open side of the door trim(B) there is a guide bar(C). This must be pushed **between** the outer door panel and the guide corner(D).

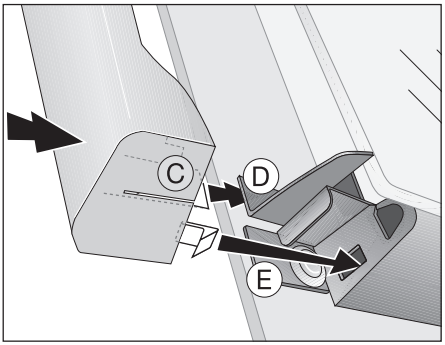

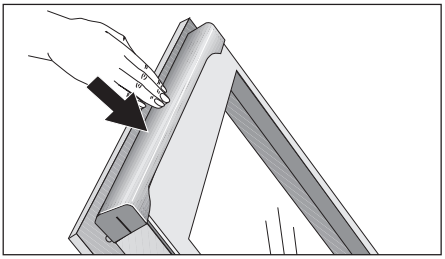

The clip seal(E) must be snapped in.

5. Close the oven door.

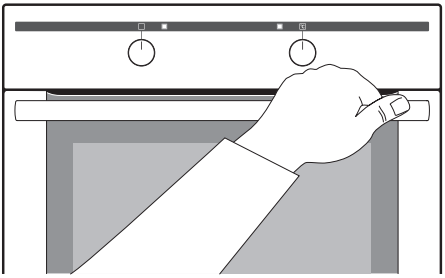

Uses, Tables and Tips

Baking

Oven function: Convection with ring heating element or Conventional

Baking tins

- For Conventional dark metal and non-stick tins are suitable.
- For Convection with ring heating element bright metal tins are also suitable.

Oven levels

- Baking with Conventional is possible on one oven level.
- With Convection with ring heating element you can bake on up to 3 baking trays at the same time:

1 baking tray:

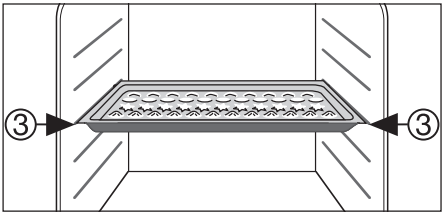

e.g. oven level 3

1 cake tin:

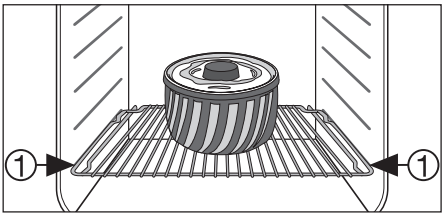

e.g. oven level 1

2 baking trays:

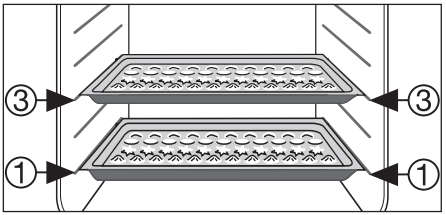

z. g., oven levels 1 and 3

3 baking trays:

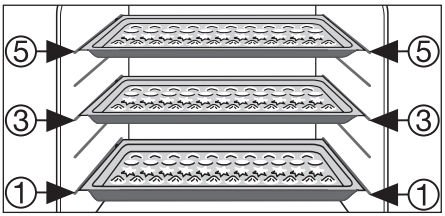

oven levels 1, 3 and 5

General instructions

- Insert the tray with the bevel at the front.
- With Conventional or Convection with ring heating element you can also bake with two tins next to one another on the oven shelf at the same time. This does not significantly increase baking time.

When frozen foods are used the trays inserted may distort during cooking. This is due to the large difference in temperature between the freezing temperature and the temperature in the oven. Once the trays have cooled the distortion will disappear again.

How to use the baking tables

The tables give the required temperature settings, baking times and oven shelf levels for a selection of typical dishes.

- Temperatures and baking times are for guidance only, as these will depend on the consistency of pastry, dough or mixture, the amount and the type of baking tin.
- We recommend using the lower temperature the first time and then if necessary, for example, if a deeper browning is required, or baking time is too long, selecting a higher temperature.
- If you cannot find the settings for a particular recipe, look for the one that is most similar.
- If baking cakes on baking trays or in tins on more than one level, baking time may be extended by 10-15 minutes.
- Moist recipes (for example, pizzas, fruit flans, etc.) are baked on one level.

- Cakes and pastries at different heights may brown at an uneven rate at first. If this occurs, **please do not change the temperature setting**. Different rates of browning even out as baking progresses.
- Your new oven may bake or roast differently to your previous appliance. So adapt your normal settings (temperature, cooking times) and oven shelf levels to the recommendations in the following tables.

With longer baking times, the oven can be switched off about 10 minutes before the end of baking time, to make use of the residual heat.
Unless otherwise stated, the values given in the tables assume that cooking is started with the oven cold.

Baking table

Baking on one oven level

Type of baking	Oven function		Oven level	Temperature °C	Time Hr: Mins.
Baking in tins					
Ring cake or brioche		Convection with ring heating element	1	150-160	0:50-1:10
Madeira cake/fruit cakes		Convection with ring heating element	1	140-160	1:10-1:30
Sponge cake		Convection with ring heating element	1	140	0:25-0:40
Sponge cake		Conventional	1	160	0:25-0:40
Flan base - short pastry		Convection with ring heating element	3	170-180[1)]	0:10-0:25
Flan base - sponge mixture		Convection with ring heating element	3	150-170	0:20-0:25
Apple pie		Conventional	1	170-190	0:50-1:00
Apple pie (2 tins Ø20 cm, diagonally off set)		Convection with ring heating element	1	160	1:10-1:30
Apple pie (2 tins Ø20 cm, diagonally off set)		Conventional	1	180	1:10-1:30
Savoury flan (e. g, quiche lorraine)		Convection with ring heating element	1	160-180	0:30-1:10
Cheesecake		Conventional	1	170-190	1:00-1:30
Cakes/pastries/breads on baking trays					
Plaited bread/bread crown		Conventional	3	170-190	0:30-0:40
Christmas stollen		Conventional	3	160-180[1)]	0:40-1:00

Type of baking	Oven function		Oven level	Temperature °C	Time Hr: Mins.
Bread (rye bread) -first of all -then		Conventional	1	 230[1)] 160-180	 0:25 0:30-1:00
Cream puffs/eclairs		Conventional	3	160-170[1)]	0:15-0:30
Swiss roll		Conventional	3	180-200[1)]	0:10-0:20
Cake with crumble topping (dry)		Convection with ring heating element	3	150-160	0:20-0:40
Buttered almond cake/sugar cakes		Conventional	3	190-210[1)]	0:15-0:30
Fruit flans (made with yeast dough/sponge mixture)[2)]		Convection with ring heating element	3	150	0:35-0:50
Fruit flans (made with yeast dough/sponge mixture)[2)]		Conventional	3	170	0:35-0:50
Fruit flans made with short pastry		Convection with ring heating element	3	160-170	0:40-1:20
Yeast cakes with delicate toppings (e. g, quark, cream, custard)		Conventional	3	160-180[1)]	0:40-1:20
Pizza (with a lot of topping)[2)]		Convection with ring heating element	1	180-200[1)]	0:30-1:00
Pizza (thin crust)		Convection with ring heating element	1	200-220[1)]	0:10-0:25
Unleavened bread		Convection with ring heating element	1	200-220	0:08-0:15
Tarts (CH)		Convection with ring heating element	1	180-200	0:35-0:50
Biscuits					
Short pastry biscuits		Convection with ring heating element	3	150-160	0:06-0:20
Viennese whirls		Convection with ring heating element	3	140	0:20-0:30
Viennese whirls		Conventional	3	160[1)]	0:20-0:30
Biscuits made with sponge mixture		Convection with ring heating element	3	150-160	0:15-0:20
Pastries made with egg white, meringues		Convection with ring heating element	3	80-100	2:00-2:30
Macaroons		Convection with ring heating element	3	100-120	0:30-0:60
Biscuits made with yeast dough		Convection with ring heating element	3	150-160	0:20-0:40
Puff pastries		Convection with ring heating element	3	170-180[1)]	0:20-0:30

Type of baking	Oven function		Oven level	Temperature °C	Time Hr: Mins.
Rolls		Convection with ring heating element	3	160[1)]	0:20-0:35
Rolls		Conventional	3	180[1)]	0:20-0:35
Small cakes (20per tray)		Convection with ring heating element	3	140[1)]	0:20-0:30
Small cakes (20per tray)		Conventional	3	170[1)]	0:20-0:30

1) Pre-heat the oven
2) Use the drip tray or roasting tray

Baking on more than one oven level

Type of baking	Convection with ring heating element	Convection with ring heating element	Temperature in °C	Time Hours: Mins.
	Shelf positions from bottom			
	2 levels	3 levels		
Cakes/pastries/breads on baking trays				
Cream puffs/Eclairs	1 / 4	---	160-180[1)]	0:35-0:60
Dry streusel cake	1 / 3	---	140-160	0:30-0:60
Biscuits/small cakes/pastries/rolls				
Short pastry biscuits	1 / 3	1 / 3 / 5	150-160	0:15-0:35
Viennese whirls	1 / 3	1 / 3 / 5	140	0:20-0:60
Biscuits made with sponge mixture	1 / 3	---	160-170	0:25-0:40
Biscuits made with egg white, meringues	1 / 3	---	80-100	2:10-2:50
Macaroons	1 / 3	---	100-120	0:40-1:20
Biscuits made with yeast dough	1 / 3	---	160-170	0:30-0:60
Puff pastries	1 / 3	---	170-180[1)]	0:30-0:50
Rolls	1 / 4	---	160	0:30-0:55
Small cakes (20per tray)	1 / 4	---	140[1)]	0:25-0:40

1) Pre-heat the oven

Tips on Baking

Baking results	Possible cause	Remedy
The cake is not browned enough underneath	Wrong oven level	Place cake lower
The cake sinks (becomes soggy, lumpy, streaky)	Oven temperature too high	Use a slightly lower setting
	Baking time too short	Set a longer baking time **Baking times cannot be reduced by setting higher temperatures**
	Too much liquid in the mixture	Use less liquid. Pay attention to mixing times, especially if using mixing machines
Cake is too dry	Oven temperature too low	Set oven temperature higher.
	Baking time too long	Set a shorter baking time
Cake browns unevenly	Oven temperature too high and baking time too short	Set a lower oven temperature and a longer baking time
	Mixture is unevenly distributed	Spread the mixture evenly on the baking tray
	Grease filter is inserted	Take out the grease filter
Cake does not cook in the baking time given	Temperature too low	Use a slightly higher oven setting
	Grease filter is inserted	Take out the grease filter

Pizza setting table

Type of baking	Shelf position	Temperature °C	Time Hr: Mins.
Pizza (thin crust)	1	180 - 200[1)]	20 - 30
Pizza (with a lot of topping)	1	180 - 200	20 - 30
Tarts	1	180 - 200	45 - 60
Spinach flan	1	160 -180	45 - 60
Quiche Lorraine	1	170 - 190	40 - 50
Quark flan, round	1	140 - 160	60 - 90
Quark flan on tray	1	140 - 160	50 - 60
Apple cake, covered	1	150 - 170	50 - 70
Vegetable pie	1	160 - 180	50 - 60
Unleavened bread	1	250 - 270[1)]	10 - 20
Puff pastry flan	1	160 - 180[1)]	40 - 50
Flammekuchen (Pizza-like dish from Alsace)	1	250 - 270[1)]	12 - 20
Piroggen (Russian version of calzone)	1	180 - 200[1)]	15 - 25

1) Pre-heat the oven

Table for Bakes and Gratins

Dish	Oven function		Shelf position	Temperature °C	Time Hr: Mins.
Pasta bake		Conventional	1	180-200	0:45-1:00
Lasagne		Conventional	1	180-200	0:25-0:40
Vegetables au gratin[1)]		Convection with ring heating element	1	160-170	0:15-0:30
Baguettes topped with melted cheese[1)]		Convection with ring heating element	1	160-170	0:15-0:30
Sweet bakes		Conventional	1	180-200	0:40-0:60
Fish bakes		Conventional	1	180-200	0:30-1:00
Stuffed vegetables		Convection with ring heating element	1	160-170	0:30-1:00

1) Pre-heat the oven

Frozen Ready Meals Table

Food to be cooked	Oven function		Shelf position	Temperature °C	Time
Frozen pizza		Conventional	3	as per manufacturer's instructions	as per manufacturer's instructions
Chips[1)] (500 g)		Convection with ring heating element	3	200-220	as per manufacturer's instructions
Baguettes		Conventional	3	as per manufacturer's instructions	as per manufacturer's instructions
Fruit flans		Conventional	3	as per manufacturer's instructions	as per manufacturer's instructions

1) Comments: Turn chips 2 or 3 times during cooking

Roasting

Oven function: Conventional or Convection grilling

Roasting dishes

- Any heat-resistant ovenware is suitable to use for roasting (please read the manufacturer's instructions).
- Large roasting joints can be roasted **directly in the roasting tray or on the oven shelf with the roasting tray placed below it.**
- For all lean meats, we recommend **roasting these in a roasting tin with a lid.** This will keep the meat more succulent.
- All types of meat, that can be browned or have crackling, can be roasted in the **roasting tin without the lid**.

Tips on using the roasting chart

The information given in the following table is for guidance only.

- We recommend cooking meat and fish **weighing 1 kg and above in the oven**.
- To prevent escaping meat juices or fat from burning on to the pan, we recommend placing some liquid in the roasting pan.
- If required, turn the roast (after 1/2 - 2/3 of the cooking time).
- Baste large roasts and poultry with their juices several times during roasting. This will give better roasting results.

- You can switch the oven off about 10 minutes before the end of the roasting time, in order to utilise the residual heat.

Roasting table

Type of meat	Quantity	Ovenfunction		Shelf position	Temperature °C	Time Hours mins.
Beef						
Pot roast	1-1.5 kg		Conventional	1	200-250	2:00-2:30
Roast beef or fillet						per cm. of thickness
- rare	per cm. of thickness		Convection grilling	1	190-200[1)]	0:05-0:06
- medium	per cm. of thickness		Convection grilling	1	180-190	0:06-0:08
- well done	per cm. of thickness		Convection grilling	1	170-180	0:08-0:10
Pork						
Shoulder, neck, ham joint	1-1.5 kg		Convection grilling	1	160-180	1:30-2:00
Chop, spare rib	1-1.5 kg		Convection grilling	1	170-180	1:00-1:30
Meat loaf	750 g-1 kg		Convection grilling	1	160-170	0:45-1:00
Porkknuckle (pre-cooked)	750 g-1 kg		Convection grilling	1	150-170	1:30-2:00
Veal						
Roast veal	1 kg		Convection grilling	1	160-180	1:30-2:00
Knuckle of veal	1.5-2 kg		Convection grilling	1	160-180	2:00-2:30
Lamb						
Leg of lamb, roast lamb	1-1.5 kg		Convection grilling	1	150-170	1:15-2:00
Saddle of lamb	1-1.5 kg		Convection grilling	1	160-180	1:00-1:30
Game						
Saddle of hare, leg of hare	up to 1 kg		Conventional	3	220-250[1)]	0:25-0:40
Saddle of venison	1.5-2 kg		Conventional	1	210-220	1:15-1:45
Haunch of venison	1.5-2 kg		Conventional	1	200-210	1:30-2:15
Poultry						

Type of meat	Quantity	Ovenfunction		Shelf position	Temper-ature °C	Time Hours mins.
Poultry portions	200-250g each		Convection grilling	1	200-220	0:35-0:50
Half chicken	400-500g each		Convection grilling	1	190-210	0:35-0:50
Chicken, poulard	1-1.5 kg		Convection grilling	1	190-210	0:45-1:15
Duck	1.5-2 kg		Convection grilling	1	180-200	1:15-1:45
Goose	3.5-5 kg		Convection grilling	1	160-180	2:30-3:30
Turkey	2.5-3.5 kg		Convection grilling	1	160-180	1:45-2:30
Turkey	4-6 kg		Convection grilling	1	140-160	2:30-4:00
Fish (steamed)						
Whole fish	1-1.5 kg		Conventional	1	210-220	0:45-1:15

1) Pre-heat the oven

Grill sizes

Oven function: Grill or Dual grill with maximum temperature setting

Important: Always grill with the oven door closed.

The empty oven should **always be pre-heated with the grill functions for 5 minutes**.

- For grilling, place the **shelf** in the **recommended shelf position**.
- Always insert the **tray for collecting the fat** into the **first shelf position** from the bottom.
- The grilling times are guidelines.
- Grilling is particularly suitable for flat pieces of meat or fish.

Grilling table

Food to be grilled	Oven level	Grilling time	
		1st side	2nd side
Burgers	4	8-10 mins.	6-8 mins.
Pork fillet	4	10-12 mins.	6-10 mins.
Sausages	4	8-10 mins.	6-8 mins.
Fillet steaks, veal steaks	4	6-7 mins.	5-6 mins.
Fillet of beef, roast beef (approx. 1 kg)	3	10-12 mins.	10-12 mins.
Toast[1)]	3	4-6 mins.	3-5 mins.
Toast with topping	3	6-8 mins.	---

1) Do not pre-heat

Defrosting

Oven function: Defrost ❄ (no temperature setting)

- Unwrap the food and place it on a plate on the oven shelf.
- Do not cover with a plate or bowl, as these can substantially lengthen the defrosting time.
- For defrosting, place the shelf in the **1st oven level from the bottom**.

Defrosting table

Dish	Defrosting time mins.	Further defrosting time (mins.)	Comments
Chicken, 1000 g	100-140	20-30	Place the chicken on an upturned saucer placed on a large plate Turn halfway through
Meat, 1000 g	100-140	20-30	Turn halfway through
Meat, 500 g	90-120	20-30	Turn halfway through
Trout, 150g	25-35	10-15	---
Strawberries, 300g	30-40	10-20	---
Butter, 250g	30-40	10-15	---
Cream, 2 x 200g	80-100	10-15	Cream can also be whipped when still slightly frozen in places
Gateau, 1400g	60	60	---

Drying

Oven function: Convection with ring heating element

- Use oven shelves covered with grease-proof paper or baking parchment.
- You get a better result if you switch the oven off halfway through the drying time, open the door and leave the oven to cool down overnight.
- After this, finish drying the food to be dried.

Food to be dried	Temperature in °C	Oven level		Time in hours (Guideline)
		1 level	2 levels	
Vegetables				
Beans	60-**70**	3	1 / 4	6-8
Peppers (strips)	60-**70**	3	1 / 4	5-6
Vegetables for soup	60-**70**	3	1 / 4	5-6
Mushrooms	50-**60**	3	1 / 4	6-8
Herbs	40-50	3	1 / 4	2-3
Fruit				
Plums	60-**70**	3	1 / 4	8-10
Apricots	60-**70**	3	1 / 4	8-10
Apple slices	60-**70**	3	1 / 4	6-8
Pears	60-**70**	3	1 / 4	6-9

Making preserves

Oven function: Bottom heat ⏚

- For preserving, use only commercially available preserve jars of the same size.
- **Jars with twist-off or bayonet type lids and metal tins are not suitable**.
- When making preserves, the **first shelf position from the bottom** is the one most used.
- Use the shelf for making preserves. There is enough room on this for up to six 1-litre preserving jars.
- The jars should all be filled to the same level and clamped shut.
- Place the jars on the baking tray in such a way that they are not touching each other.
- Pour approx. 1/2 litre of water into the baking tray so that sufficient moisture is produced in the oven.
- As soon as the liquid starts to pearl in the first jars (after about 35-60 minutes with 1 litre jars), switch the oven off or reduce the temperature to 100°C (see table).

Preserves table

The times and temperatures for making preserves are for guidance only.

Preserve	Temperature in °C	Cooking time until simmering in mins.	Continue to cook at 100 °C in mins.
Soft fruit			
Strawberries, blueberries, raspberries, ripe gooseberries	160-170	35-45	---
Unripe gooseberries	160-170	35-45	10-15
Stone fruit			
Pears, quinces, plums	160-170	35-45	10-15
Vegetables			
Carrots[1)]	160-170	50-60	5-10
Mushrooms[1)]	160-170	40-60	10-15
Cucumbers	160-170	50-60	---
Mixed pickles	160-170	50-60	15
Kohlrabi, peas, asparagus	160-170	50-60	15-20
Beans	160-170	50-60	---

1) Leave standing in oven when switched off

Cleaning and Care

⚠ **Warning**: First switch off the appliance and let it cool down before carrying out any cleaning.

Warning: For safety reasons, do **not** clean the appliance with steam blasters or high-pressure cleaners.

Attention: Do not use any corrosive cleaning fluids, sharp objects or stain removers.

Do not clean the glass oven door with abrasive fluids or metal scrapers, which could scratch the surface. The glass could crack and shatter.

Outside of the appliance

- Wipe the front of the appliance with a soft cloth and a solution of hot water and washing up liquid.
- For metal fronts, use normal commercially available cleaning agents.
- Please do not use scouring agents and abrasive sponges.

Oven Interior

Cleaning

The walls that have a catalytic coating are self-cleaning. They absorb splashes of fat while the oven is in use.

To support this self-cleaning process, we recommend heating the oven without any food at regular intervals.

1. For cleaning, turn the oven light on.
2. Remove all slide-in items from the oven.
3. Wash the oven floor with warm water and washing up liquid, then dry it.
4. Set the oven temperature to 250 °C.
5. Switch the oven off after one hour.
6. Wipe off any remaining soiling with a **soft** damp sponge.

⚠ **Important!** Do not use oven sprays or abrasive cleaners. Do not use soap or other cleaning agents. Doing so can damage the catalytic surface.

Over time the catalytic coating can discolour slightly. This does not affect its catalytic properties.

Accessories

Wash all slide-in units (shelf unit, baking tray, shelf support rails etc.) after each use and dry well. Soak briefly to make them easier to clean.

Fat Filter

1. Clean the fat filter in hot water and washing up liquid or in the dishwasher.
2. Badly burned on soiling can be removed by boiling the filter in a little water to which 2-3 tablespoonsful of dishwasher cleaner has been added.

Oven shelf runner

The shelf support rails on the left and right hand sides of the oven can be removed for cleaning the side walls.

Removing the shelf support rails

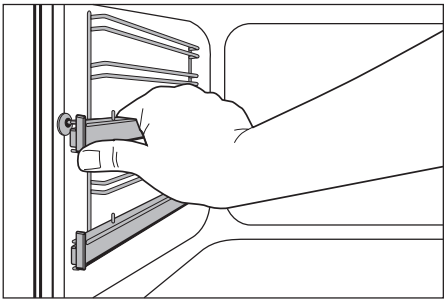

First pull the front of the rail away from the oven wall and then unhitch at the back.

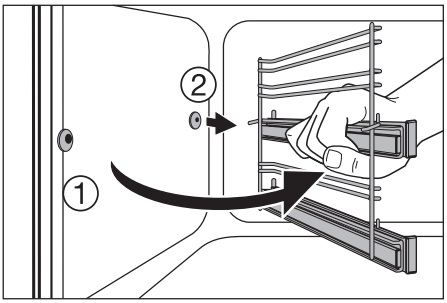

Fitting the shelf support rails

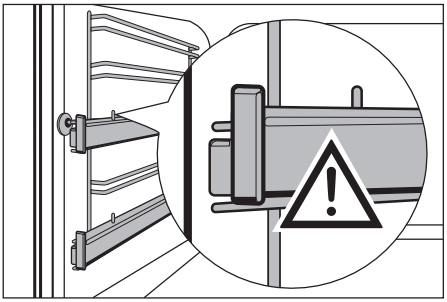

When inserting the rails, make sure that the retaining pins on the telescopic runners are pointing to the front.

To install, first reattach the rails at the back, then put them into position at the front and press them into place.

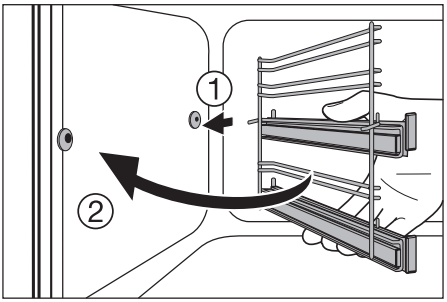

Cleaning the oven shelf runner

Clean oven shelf runners with hot water and washing up liquid.

Important: The oven shelf runners **cannot be cleaned in the dishwasher.**

Important: On no account grease telescopic runners.

Oven Lighting

⚠ **Warning:** Risk of electric shock! Prior to changing the oven light bulb:
– Switch off the oven!
– Disconnect from the electricity supply.

ⓘ Place a cloth on the oven floor to protect the oven light and glass cover.

Changing the oven light bulb/cleaning the glass cover

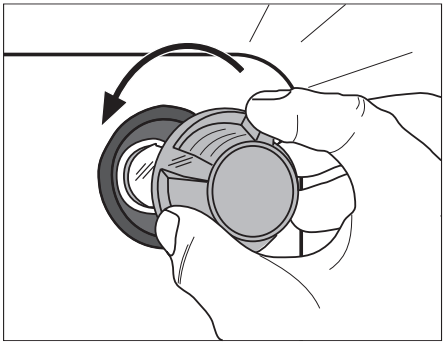

1. Remove the glass cover by turning it anti-clockwise and then clean it.
2. If necessary: replace with **25 watt, 230 V, 300 °C heat-resistant oven lighting.**
3. Refit the glass cover.

Changing side oven light/Cleaning glass cover

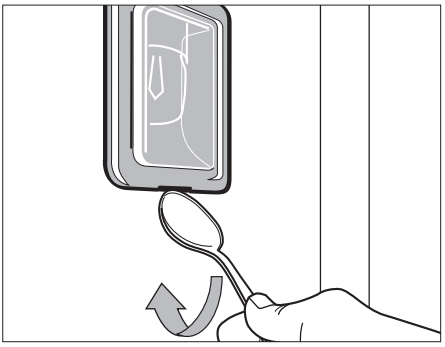

1. Remove the left shelf support rail.
2. Remove the glass cover with the aid of a narrow, blunt implement (e.g., tea-spoon) and clean it.
3. If necessary: **replace bulb with a 25 watt, 230 V, 300 °C heat-resistant,** oven light bulb.
4. Refit the glass cover.

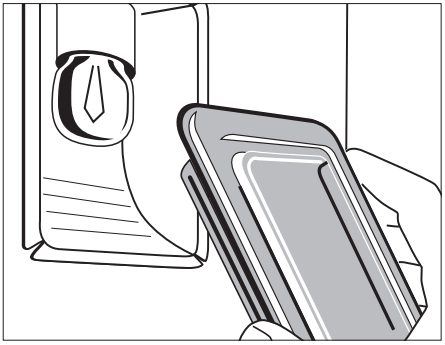

5. Insert the shelf support rail.

Oven door

For easier cleaning of the oven interior the oven door of your appliance can be taken off its hinges.

Removing the oven door from its hinges

1. Open the oven door as far as it will go.

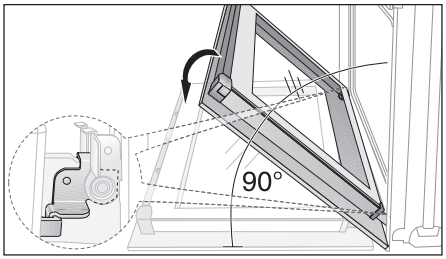

2. Undo the **clamping levers** (A) on both door hinges **fully**.

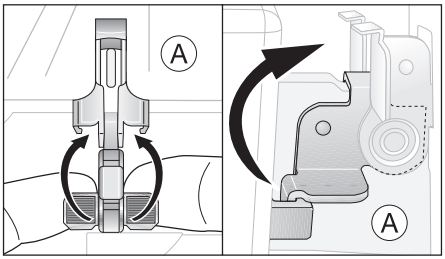

3. Close the oven door as far as the first position (approx. 45°).

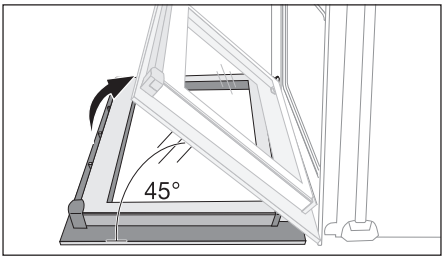

4. Take hold of the oven door with a hand on each side and pull it away from the oven at an upwards angle (**Take care:** It is heavy).

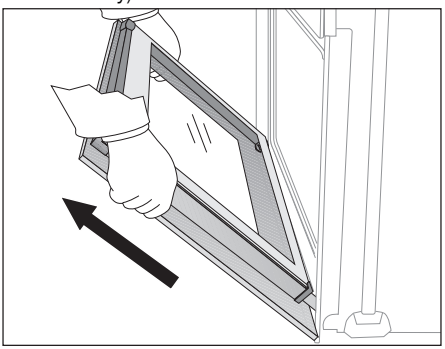

Lay the oven door with the outer side facing downwards on something soft and level, for example, a blanket in order to prevent scratches.

Hanging the oven door back on its hinges

1. From the handle side take hold of the oven door with a hand on each side and hold at an angle of approx. 45°. Position the recesses on the bottom of the oven door on the hinges on the oven.

Let the door slide down as far as it will go.

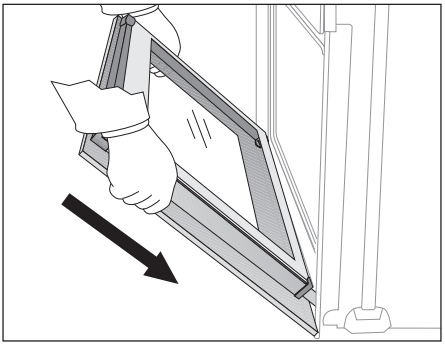

2. Open the oven door as far as it will go.

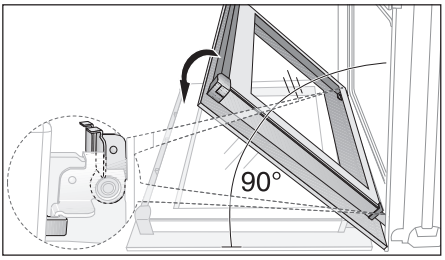

3. Fold up the clamping levers (A) on both door hinges back into their original positions.

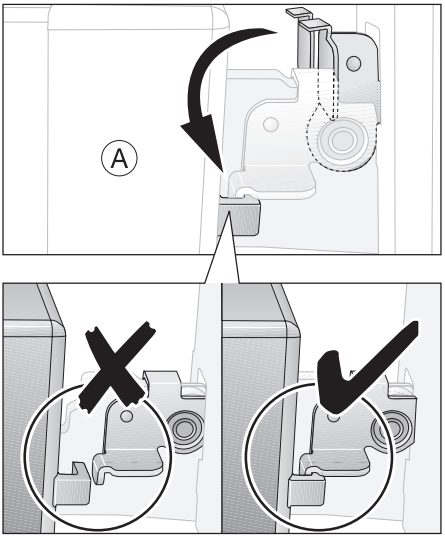

4. Close the oven door.

Oven door glass

The oven door is fitted with three panels of glass mounted one behind the other.The inner panels can be removed for cleaning.

⚠ **Important!** Rough handling, especially around the edges of the front panel, can cause the glass to break.

Removing the door glass panels

1. Open the oven door as far as it will go.

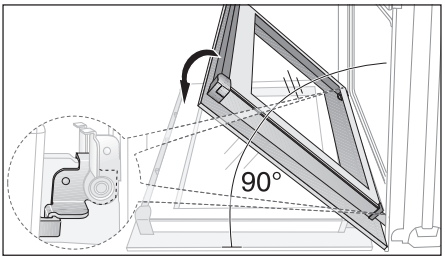

2. Undo the **clamping levers (A) on both door hinges** fully

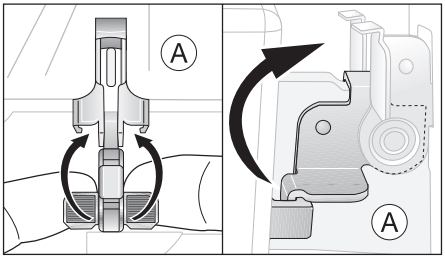

3. Close the oven door as far as the first position (approx. 45°).

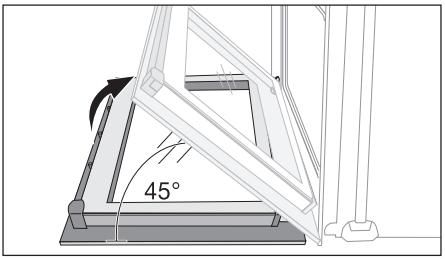

4. Take hold of the door trim(B) on the upper edge of the door at both sides and press inwards to release the clip seal.

Then remove the door trim by pulling it

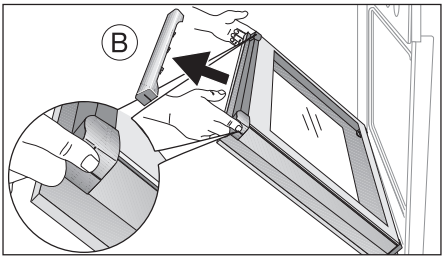

upwards.

5. Take hold of the door glass panels on their upper edge one after the other and take them out of the guide by pulling them upwards..

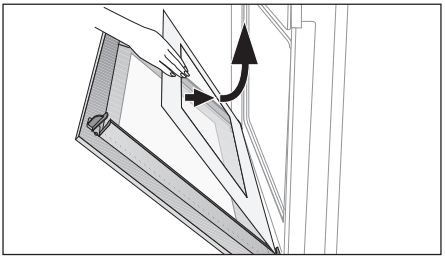

Cleaning the door glass panels

Clean the door glass panels thoroughly with a solution of water and washing up liquid. Then dry them carefully

Putting the door glass panels back.

1. From above insert the door glass panels at an angle into the door profile at the bottom edge of the door one after the other and lower them.

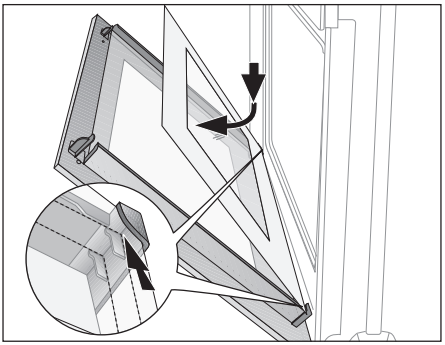

ℹ Insert the smaller panel first, then the larger panel.

2. Take hold of the door trim (B) at each side, position it on the inside edge of the door and plug the door trim (B) into the upper edge of the door

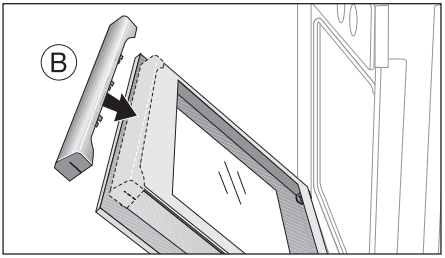

On the open side of the door trim (B) there is a guide bar (C). This must be pushed **between** the outer door panel and the guide corner (D).

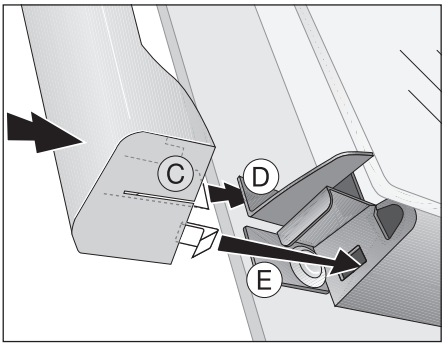

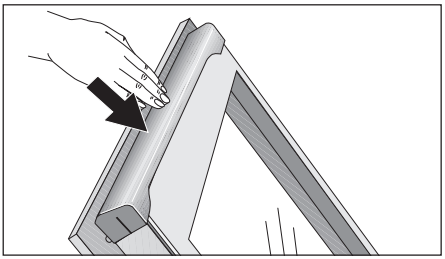

The clip seal (E) must be snapped in.

3. Open the oven door as far as it will go.

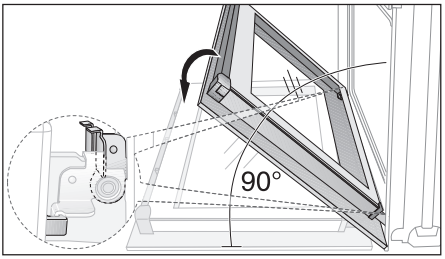

4. Fold up the clamping levers (A) on both door hinges back into their original positions

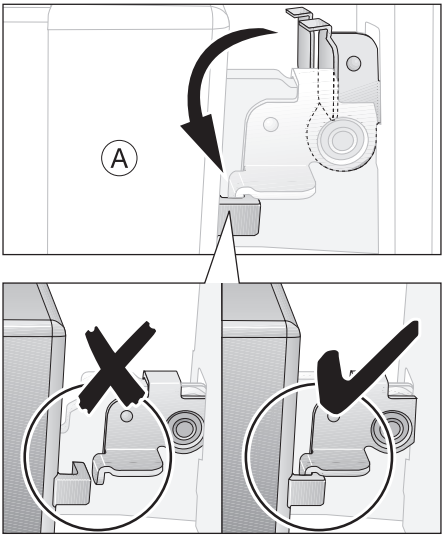

5. Close the oven door.

What to do if **...**

Problem	Possible cause	Remedy
The oven is not heating up	The oven is not switched on	Switch oven on
	The clock has not been set	Set the current time on the clock
	The required settings have not been made	Check the settings
	The house wiring fuse (in the fuse box) has tripped	Check the fuses. If the fuses trip repeatedly, please call an authorised electrician.
The oven lighting is not operating	The oven light bulb is faulty	Replace oven light bulb
F11 appears in the time display	The meat probe has short circuited or the meat probe's plug is not firmly in position in the socket	Insert the meat probe plug into the socket on the side wall of the oven as far as it will go

If you are unable to remedy the problem by following the above suggestions, please contact your local Service Force Centre.

⚠ **Warning!** Repairs to the appliance are only to be carried out by qualified service engineers. Considerable danger to the user may result from improper repairs.

ⓘ If the appliance has been operated incorrectly, the engineer's visit will be chargeable, even during the warranty period.

ⓘ **Advice on cookers with metal fronts:**
Because of the cold surface at the front of the cooker, opening the oven door during (or just after) baking or roasting may cause the glass to steam up.

Service

In the event of technical faults, please first check whether you can remedy the problem yourself with the help of the operating instructions (section “What to do if…”).

If you were not able to remedy the problem yourself, please contact the Customer Care Department or one of our service partners.

In order to be able to assist you quickly, we require the following information:

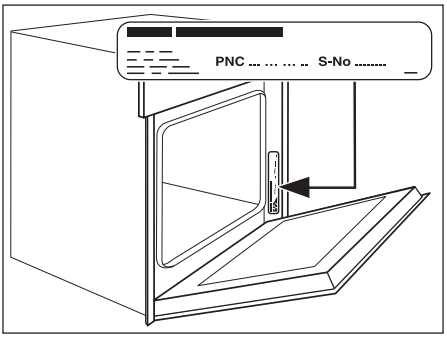

– Model description
– Product number (PNC)
– Serial number (S No.)
  (for numbers see rating plate)
– Type of fault
– Any error messages displayed by the appliance

So that you have the necessary reference numbers from your appliance at hand, we recommend that you write them in here:

Model description: .....

PNC: .....

S No: .....

822 721 451-A-271008-01 Subject to change without notice

www.electrolux.com

CE